



Oli-Feed Holder / Slo

Coolant hole holder for straight shank
BT40, BT50

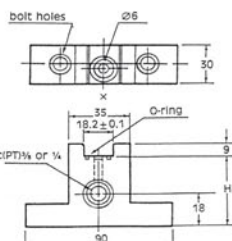

■ Dimension

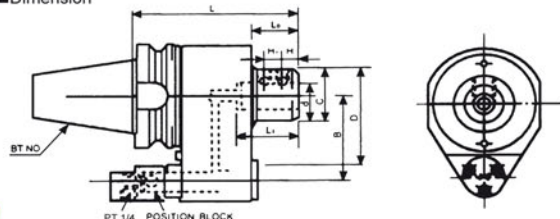

(Note) H & X dimensions differ depending on machines employed.


POSITIONING BLOCK

In using, OIL-FEED holder, positioning block illustrated here is necessary. The positioning block can be mounted to the spindle guide but it shall be mounted so as not to interfere with ATC arm, etc. of machine. it is necessary to consult the machine manufacturer about the proper mounting.

Unit:mm

ORDER NO.	d	L	B	C	D	L0	L1	H	H1	WEIGHT(kgs)	CODE NO.
BT40SLO32-165	32	165	65	53	90	52	60	15	15	4KGS	3214-001
BT40SLO40-165	40	165	65	70	90	52	70	19	18	4.6KGS	3214-002
BT50SLO32-165	32	165	80	54	100	42	60	15	15	7.1KGS	3214-003
BT50SLO40-170	40	170	80	64	100	52	70	19	18	7.8KGS	3214-004

Reducing sleeve for oil feed holder.

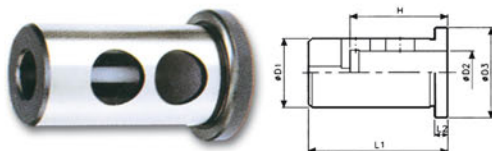

ORDER NO.	D1	D2	D3	L1	L2	H	WEIGHT(kg)	CODE NO.
OC32-20	32	20	42	63	6	48	0.4	3214-103
OC32-25		25				54	0.3	3214-104
OC40-25	40	25	50	63	6	54	0.6	3214-105
OC40-32		32				58	0.5	3214-106